

# ELECTRONICA SOFMEL

<p>Joystick Family  <b>JF</b> 9 pines  <b>J15P</b> 15 pines</p> 	<p><b>JFSTS</b>            Joystick Family tipo Sega</p> 	<p>Joystick Family tipo Play Station  <b>J9PTP</b> 9 pines  <b>J15PTP</b> 15 pines</p> 	<p><b>JSEGA</b>            Joystick Sega</p> 
<p><b>JPLAY</b>            Joystick Play Station Digital</p> 	<p><b>JPA</b>            Joystick Play Station Análogo</p> 	<p><b>JP2A</b>            Joystick Play Station II. Análogo</p> 	<p><b>MP0709</b>            Joystick PC Digital USB</p> 
<p><b>MP9002</b>            Joystick Analogo PC USB</p> 	<p><b>NG2122</b>            Joystick PC Analogo USB</p> 	<p><b>NG2128</b>            Joystick PC USB Analogo c/vibracion</p> 	<p><b>CSEGA</b>            Cable A/V Sega</p> 
<p><b>AVPLAY</b>            Cable A/V Play Station</p> 	<p><b>RFSEGA</b>            Adaptador de RF para Sega</p> 	<p><b>RFPLAY</b>            Adaptador de RF para Play Station</p> 	<p><b>FAMILY</b>            Fuente para Family Game</p> 
<p><b>SEGA</b>            Fuente para Sega</p> 	<p><b>FPLAY</b>            Fuente Play Station PS One</p> 	<p><b>FPS2</b>            Fuente Play Station 2</p> 	